

Quadro



FG-18C

HR
Upute za uporabu

EN
User manual



NAPOMENA O UPORABI

ODBACIVANJE:

Nemojte odbacivati ovaj proizvod s nesortiranim otpadom iz domaćinstva. Nužno je odvojeno sakupljanje ovakvog otpada zbog posebnog tretmana.

Zabranjeno je odbacivati ovaj uređaj u otpad iz domaćinstva.

Postoji više mogućnosti za njegovo odbacivanje:


Lokalna uprava je utemeljila sustave sakupljanja, putem kojih je moguće odbaciti elektronski otpad bez troška za korisnika

Pilikom kupovine novog proizvoda, distributer može uzeti stari uređaj bez troška za korisnika

Proizvođač može uzeti stari proizvod bez troška za korisnika

Budući da stari proizvodi sadrže vrijedne materijale, mogu biti prodani u staro željezo

Divlje odbacivanje otpada u šumama i krajolicima može ugroziti vaše zdravlje ako opasne tvari procure u podzemne vode i pronađu svoj put u prehrambeni lanac.

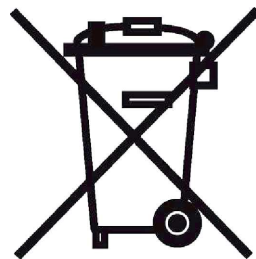

Quadro

HRVATSKI

FG-18C

Hvala vam na odabiru našeg uređaja. Molimo pročitajte ove upute za uporabu pažljivo prije korištenja.

VAŽNE SIGURNOSNE UPUTE

PROČITAJTE I SPREMITE OVE SIGURNOSNE UPUTE ZA UPORABU PRIJE KORIŠTENJA UREĐAJA

UPOZORENJE: Prilikom korištenja električnog uređaja uvijek se držite osnovnih sigurnosnih mjera kako bi se smanjio rizik od požara, strujnog udara i ozljeda.

Koristite ovaj uređaj samo onako kako je opisano u ovom priručniku. Drugačija uporaba, koja nije preporučena, može uzrokovati požar, strujni udar ili ozljede.

Ovaj je proizvod namijenjen SAMO za kućanstvo, a ne za komercijalnu, industrijsku ili vanjsku upotrebu.

Za zaštitu od strujnog udara: nemojte postavljati uređaj na prozorsku klupčicu, nemojte uranjati uređaj, utikač ili kabel u vodu te nemojte prskati tekućinom.

Zbog smanjenja rizika od udara, ovaj utikač namijenjen je da pristaje utičnici. Ukoliko utikač ne pristaje utičnici u potpunosti, okrenite utikač. Ako i dalje ne pristaje utičnici, kontaktirajte kvalificiranog električara.

NE pokušavajte zanemariti ovu sigurnosnu značajku.

Nije namijenjeno da osobe (uključujući djecu) smanjene fizičke, senzorne ili mentalne sposobnosti, ili s nedostatkom iskustva i znanja, koriste ovaj uređaj, osim ako im je osoba odgovorna za njihovu sigurnost dala uputu o upotrebi uređaja ili ih nadzire.

Djecu treba nadzirati kako bi se osiguralo da se ne igraju s uređajem.

Ugasite uređaj te ga isključite iz struje kada nije u upotrebi, prilikom premještanja s jednog mjesta na drugo i prije čišćenja.

Da biste odspojili uređaj, prvo ga ugastite, zgrabite utikač i izvadite ga iz zidne utičnice. Nikada ne povlačite utikač za kabel.

Ne upravljajte uređajem u prisutnosti eksplozivnih i/ili zapaljivih para.

Ne postavljajte uređaj ili dijelove u blizini otvorenog plamena, uređaja za kuhanje ili ostalih uređaja za grijanje.

Ne koristite uređaj ukoliko su utikač ili kabel oštećeni, ukoliko je proizvod u kvaru ili ako je proizvod pao ili je oštećen na bilo koji način.

Izbjegavajte kontakt s pomičnim dijelovima ventilatora.

Korištenje priključaka koje proizvođač nije preporučio može uzrokovati štetu.

Postavite ventilator na suhu ravnu površinu.

Nemojte objesiti ili montirati uređaj na zid ili strop.

Ne koristite ako je kućište uređaja oštećeno.

Slabi spoj između električne utičnice i utikača može uzrokovati pregrijavanje ili izobličenje utikača.


Kontaktirajte kvalificiranog električara kako biste promijenili neispravnu ili istrošenu utičnicu.

Koristite na napajanju koje odgovara onome iskazanome na naljepnici uređaja.

Kako bi se izbjegla opasnost, oštećeni kabel za napajanje mora zamijeniti proizvođač, njegov servis ili slične kvalificirane osobe.

Ovaj uređaj mogu koristiti djeca starija od 8 godina i osobe smanjene fizičke, senzorne ili mentalne sposobnosti, ili osobe s nedostatkom iskustva i znanja, uz nadzor ili uz danu uputu o korištenju uređaja na siguran način te ako razumiju moguće opasnosti. Djeca se ne smiju igrati s uređajem. Djeca ne smiju čistiti i održavati uređaj bez nadzora.

IDENTIFIKACIJA/SASTAVLJANJE DIJELOVA

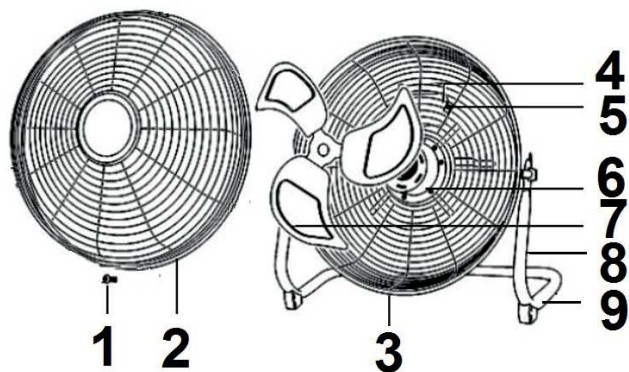


- | | |
|-----------------------------|----------------------------|
| 1. Sigurnosni vijak | 2. Prednji poklopac |
| 3. Stražnji poklopac | 4. Ručka |
| 5. Sklopka okvira | 6. Motor |
| 7. Ventilator | 8. Metalna cijev |
| 9. Metalna baza | |

Provjerite dali je sav pribor uključen, ako je bilo kakva stavka oštećena ili nedostaje, obratite se svom prodavaču.

UGRADNJA METALNE OSNOVE

Osigurajte da je ventilator iskopčan iz napajanja i okrenut na pravilnu stranu prije početka sklapanja.

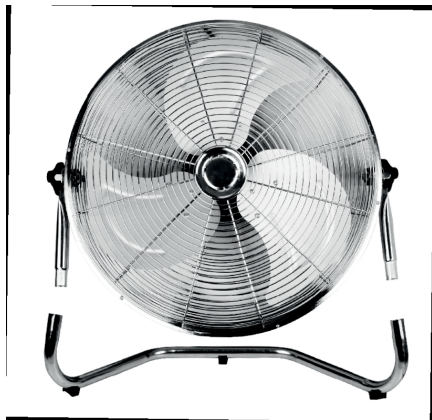

1. Odvijte vijke iz metalne cijevi.
2. Umetnite metalne cijevi u metalnu podlogu, i zategnite vijke.
3. OPERACIJA
 1. Postavite ventilator na ravnu i suhu površinu.
 2. Priključite ventilator na odgovarajuću mrežnu utičnicu. Odaberite željenu brzinu postavljanjem okretanjem gumba za upravljanje brzinama. Postoje 4 postavke - 0 (isključeno), 1 (nisko), 2 (srednje) i 3 (visoka).
 3. Za podešavanje kuta nagiba glave ventilatora, lagano gurajte kućište.

Oprez: Ventilator treba uvijek biti isključen prilikom podešavanja.

4. Okrenite gumb za kontrolu brzine na "0" i iskopčajte ventilator nakon uporabe.

Upozorenje: Nikada ne dodirujte nož rukom ili bilo kojim drugim objektima kada ventilator radi.

ČIŠĆENJE I POHRANJIVANJE

4. NJEGA I ČIŠĆENJE

Prije čišćenja uvijek odspojite ventilator iz utičnice.

Izbjegavajte kontakt s pokretnim dijelovima ventilatora.

- Za čišćenje ventilatora koristite samo meku vlažnu krpu.

NEMOJTE uranjati ventilator u vodu i nikad ne dopustiti da voda kaplje u kućište motora.

Nikada nemojte prskati uređaj tekućinama ili ga uranjati u vodu ili drugu tekućinu.

NEMOJTE koristiti benzin, razrjeđivač boje ili druge kemikalije za čišćenje ventilator.

Provjerite je li ventilator isključen iz napajanja prije uklanjanje poklopca.

Očistite oštricu ventilatora i rešetke mekom vlažnom krpom.

OPREZ: Oštrica peraje može imati oštre rubove.

Pohranite ventilator u izvornu kutiju ili pokrijte ventilator kako bi ga zaštitili od prašine na suhom mjestu, ako se ne koristi dugo vremena.

5. SPECIFIKACIJA

Napajanje AC 220-240V ~ 50Hz

Potrošnja energije 100W

Radna temperatura 5-40 ° C

NAPOMENA: Specifikacija uređaja i dijelovi koji dolaze s njim mogu se razlikovati od djelova i specifikacija navednih u uputi.

Instruction Manual

Read this Instruction Manual carefully before assembling or operating the appliance and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE SAFETY INSTRUCTIONS BEFORE USING THIS APPLIANCE

WARNING: When using electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and personal injury.

Use this fan only as described in this manual. Other use not recommended may cause fire, electric shock or injury to persons.

This product is intended for household use **ONLY** and not for commercial, industrial or outdoor use.

To protect against electric shock: do not place fan on windowsills, immerse unit, plug or cord in water or spray with liquids.

To reduce the risk of shock, this plug is intended to fit the outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature.

To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.

This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Turn the fan **OFF** and unplug the fan from the outlet when not in use, when moving the fan from one location to another and before cleaning.

To disconnect the fan, first turn the unit **OFF**, grip the plug and pull it from the wall outlet. Never pull the plug by the cord.

Do not operate the fan in the presence of explosive and/or flammable fumes.

Do not place the fan or any parts near an open flame, cooking or other heating appliance.

Do not operate fan with a damaged cord or plug, or if the product malfunctions, or dropped and damaged in any manner.

Avoid contact with moving fan parts.

The use of attachments not recommended by the manufacturer may be hazardous.

Place the fan on a dry level surface.

Do not hang or mount fan on a wall or ceiling.

Do not operate if the fan housing is damaged.

A loose fit between the AC outlet (receptacle) and plug may cause overheating and a distortion of the plug.


Contact a qualified electrician to replace loose or worn outlet.

Only use on a power supply that matches that shown on the unit's rating label.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

PARTS IDENTIFICATION / ASSEMBLY

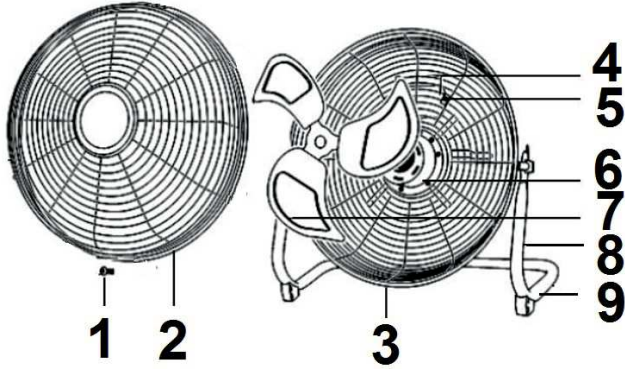

- 1. Safety Screw
- 3. Rear Grill
- 5. Switch Box
- 7. Blade
- 9. Metal Base


- 2. Front Grill
- 4. Handle
- 6. Motor
- 8. Metal Tube

Remove all packing material and accessories. Make sure all the accessories are included, if any item is damaged or missing, contact your dealer.

OPERATION

ASSEMBLY OF METAL BASE

Ensure the Fan is unplugged from the power supply and turned off before commencing assembly.

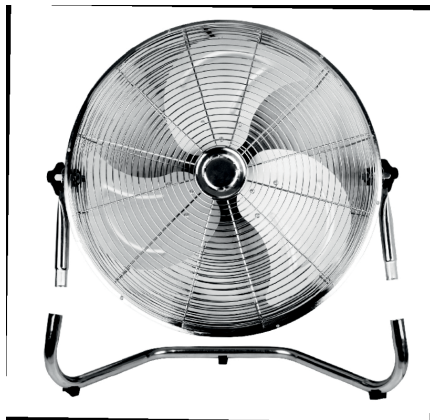

1. Unscrew the Screws from the **Metal Tube**.
2. Insert the **Metal tubes** into the **Metal Base**, re-insert and tighten the Screws.

3. OPERATION

1. Place your fan on a level and dry surface.
2. Plug the fan in to a suitable mains socket. Select the desired speed setting by turning the **Speed Control Knob**. There are 4 settings – 0 (off), 1 (low), 2 (medium) and 3 (high).

3. To adjust the tilt angle of fan head by pushing the guard gently.

Caution: The fan should always be switched off when making this adjustment.

4. Turn the **Speed Control Knob** to “0” and unplug the fan after use.

Warning: Never touch the blade with hand or any other objects when the fan is operating.

CLEANING AND STORAGE

4. CARE AND CLEANING

Always disconnect the fan from mains socket before cleaning.

Avoid contact with moving fan parts.

Use only a soft damp cloth to clean the fan.

DO NOT immerse the fan in water and never allow water to drip into the Motor Housing.

Never spray the appliance with liquids or submerge it in water or other liquid.

DO NOT use gasoline, paint thinner or other chemicals to clean the fan.

Ensure that the fan is switched off from the supply mains before removing the grill.

Clean the fan blade and grills with a soft damp cloth.

CAUTION: The Fan Blade may have sharp edges. Handle with extreme care.

Store the fan in its original box or cover the fan to protect it from dust in a dry place if it will not be used for a long period of time.

5. SPECIFICATION

| | |
|----------------------------|--------------------|
| Power Supply..... | AC 220-240V ~ 50Hz |
| Power Consumption..... | 100W |
| Operation Temperature..... | 5-40°C |

NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.

Quadro